

Note!

Before installing this product, check the contents of the kit. If anything is missing, please check an Öhlins dealer.

Kit Contents

Description	Part No	Pcs
Shock absorbers	HO 430	2
C-spanner S36	60710-01	2
Sticker set"ÖHLINS"	10207-01	1
Owners manual	07241-02	1

Note!

Please note that this image is a general representation of the product and may differ slightly from your product.

Note!

Please note that during storage and transportation, especially at high ambient temperature, some of the oil and grease used for assembling may leak and stain the packaging. This is in no way detrimental to the product, wipe off the excessive oil/grease with a cloth.

⚠ Warning!

Before installing this product, read the Öhlins Owner's Manual. The shock absorber is an important part of your vehicle and will affect the stability.

Shock Absorber for Honda Forza

HO 430

Mounting Instructions

ÖHLINS
ADVANCED SUSPENSION TECHNOLOGY

MOUNTING INSTRUCTIONS

⚠ Warning!

It is advisable to have an Öhlins dealer install the shock absorber.

⚠ Warning!

If working on a raised vehicle, ensure it is securely supported so that it will not tip over.

Note!

Before mounting this product clean the vehicle thoroughly.

Note!

When working on this product, always see the Vehicle Service Manual for vehicle specific procedures and important data.

1
Put the motorcycle on a work stand so that the rear wheel barely touches the ground. Make sure the motorcycle is in a stable position.


2
Work with one side at a time. Loosen and remove the upper and lower mounting bolts of the shock absorber.

3
Install the Öhlins shock absorber.

4
Tighten the upper mounting bolt at a torque value as specified in the vehicle service manual and the lower mounting bolt at torque 20 Nm. Use thread-locker on the bolts. Ensure that the screw heads point out.

5
Repeat the procedure on the other side.

MOUNTING INSTRUCTIONS

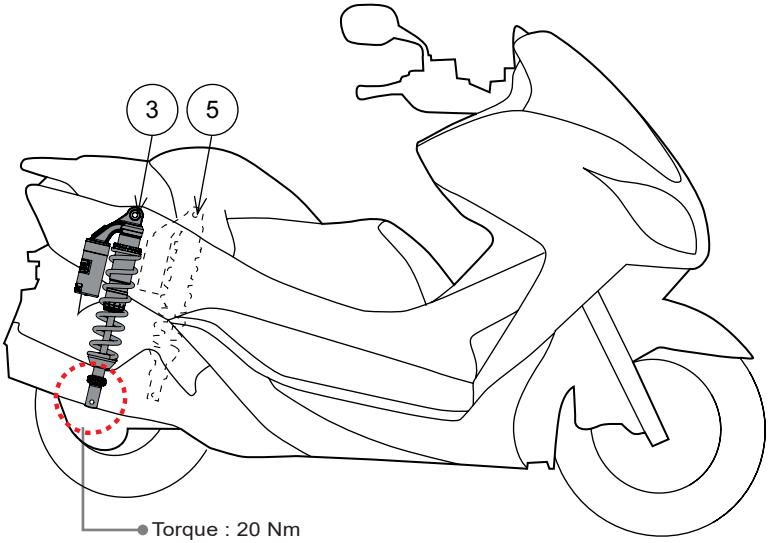

Note!

Lower the vehicle so that the suspension is slightly compressed before tightening the screws.


Caution!

Ensure that all screws are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber when the suspension is fully compressed or extended.

ADJUSTMENTS

⚠ Warning!

Before riding, always make sure that the basic settings made by Öhlins are according to recommended Set-up Data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up.

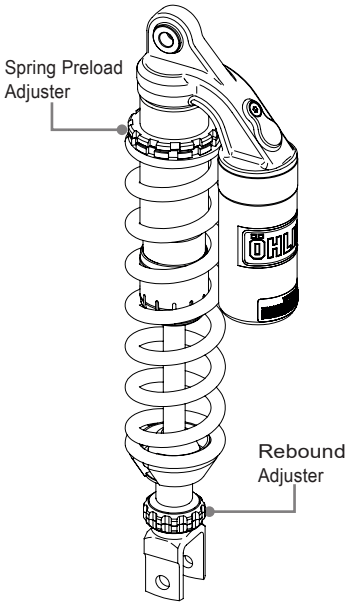

SET-UP DATA

Recommended set-up

Spring Preload.....	2 mm.
Rebound adjuster	22 Clicks

Shock absorber data

Length	400 mm.
Stroke	115 mm.

Spring

Part No	60480-01
Free spring length...	230 mm.
Spring rate.....	Prog 10-14 N/mm
Preload adj.range....	[0-10] mm

Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_HO 430_EN_3
Issued 2020-10-19

© Öhlins Asia Co. Ltd. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Asia Co. Ltd
700/937 Moo5, Tambol Nongkhaga,
Amphur Phantong, Chonburi Province
20160 Thailand

ÖHLINS
ADVANCED SUSPENSION TECHNOLOGY

www.ohlins.com