

Kit Contents		
Description	**Part No**	**Pcs**
Steering damper SD20, stroke 73	-	1
Bracket assembly	-	1
Bolt MC6S 6×35	01046-06	1
Screw K6S 8×20	05404-02	1
Bolt MC6S 6×40	01046-09	1
Triple clamp bracket	02270-37	1
Frame bracket	02272-24	1
Screw M26×1	02274-04	1
Bolt MC6S 6×22	01046-05	1
Sleeve	02239-01	1
Teflon spacer	02259-03	1
Washer 8.4/16/1.5	00153-01	1
Öhlins Sticker	00192-01	2
Owner's Manual	07261-02	1

Note!

Please note that there can be small differences between your product and the images in these instructions.

Note!

Please note that during storage and transport, especially at high ambient temperature, some of the oil and grease used for assembly may leak and stain the packaging. This will not cause damage to the product, wipe off the excessive oil or grease with a cloth.

Note!

Before you install this product, check the kit contents. If anything is missing, please contact an Öhlins dealer.

⚠ Warning!

Before you install this product, read the Öhlins Owner's manual. This product is an important part of the vehicle and the vehicle stability.

Steering Damper for Kawasaki ZX 636R

SD20 042

Mounting Instructions

ÖHLINS

MOUNTING INSTRUCTIONS

⚠ Warning!

We strongly recommend to let an Öhlins dealer install this product.

⚠ Warning!

If you work with a lifted vehicle, make sure that it is safely supported to prevent it from tipping over.

👁 Note!

When you work with this product, see the vehicle service manual for vehicle specific procedures and important data.

👁 Note!

Before you install this product clean the vehicle.

1

Loosen the fuel tank attachment by removing the two screws.

2

Mount the frame bracket according to the image. Use screws provided in this kit to mount the bracket on the fuel tank bracket.

3

Remove the original steering stem screw. Remove the original washer. Mount the triple clamp bracket to the steering stem, use the screw provided in this kit.

👁 Note!

Tighten the top nut of the steering stem. Torque according to Vehicle Service Manual. If no torque is recommended tighten to 100 Nm

4

Mount the bracket assembly to the triple clamp bracket. Use screw, teflon spacer and sleeve provided in this kit.

5

Mount the Öhlins steering damper to the bracket assembly. Do not tighten yet.

6


Mount the steering damper end eye to the frame bracket. Use the screw and washer provided in this kit.

7


Adjust the steering damper by sliding it in the bracket assembly so that the steering damper uses similar stroke lengths in both directions.

✋ Caution!

Ensure that all screws are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber/front fork/steering damper when the suspension is fully compressed or extended.

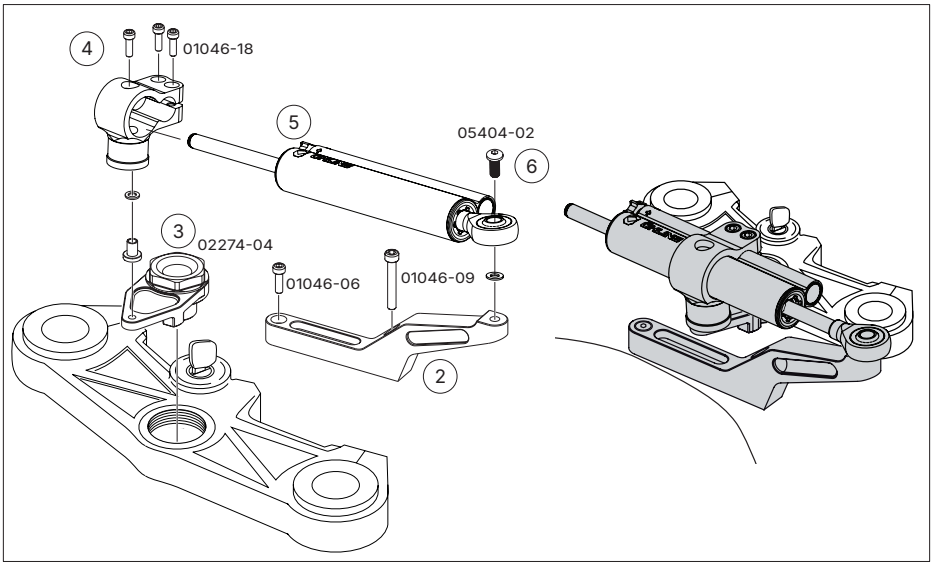


MOUNTING INSTRUCTIONS

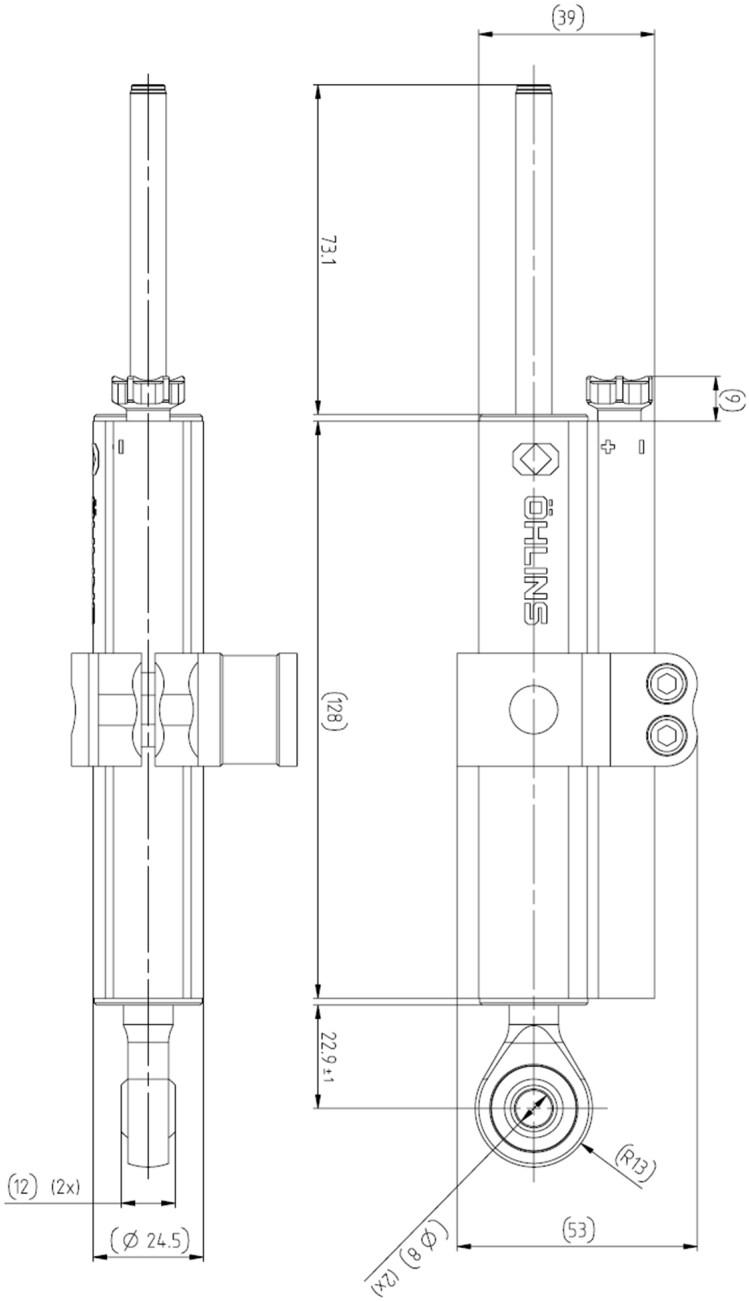

ADJUSTMENTS

⚠ Warning!

Before you ride/drive, always make sure that the setup is according to the recommended setup data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up.

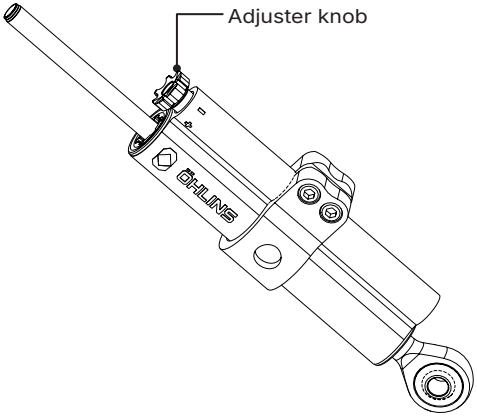

SETUP DATA

Rec. set up	12	clicks

Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_SD20 042_0
Issued 2026-02-23

© Öhlins Group AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Group AB is prohibited.

Öhlins Group AB
Box 722
S-194 27 Upplands Väsby, Sweden
Phone +46 8 590 025 00
fax +46 8 590 025 80